

Power Rear Window Shade , (3Y2),(3Y5)

From June 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Left Rear Door Control Module

- J388 Left Rear Door Control Module
- ST3 Fuse Panel 3
- SB5 Fuse 5 (On Fuse Panel B)
- T20g 20-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar

- 34 Ground Connection Under Driver Seat
- 207 Ground Connection (in Left Rear Door Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)
- R19 Positive Connection 1 (30) (in Left Rear Door Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions

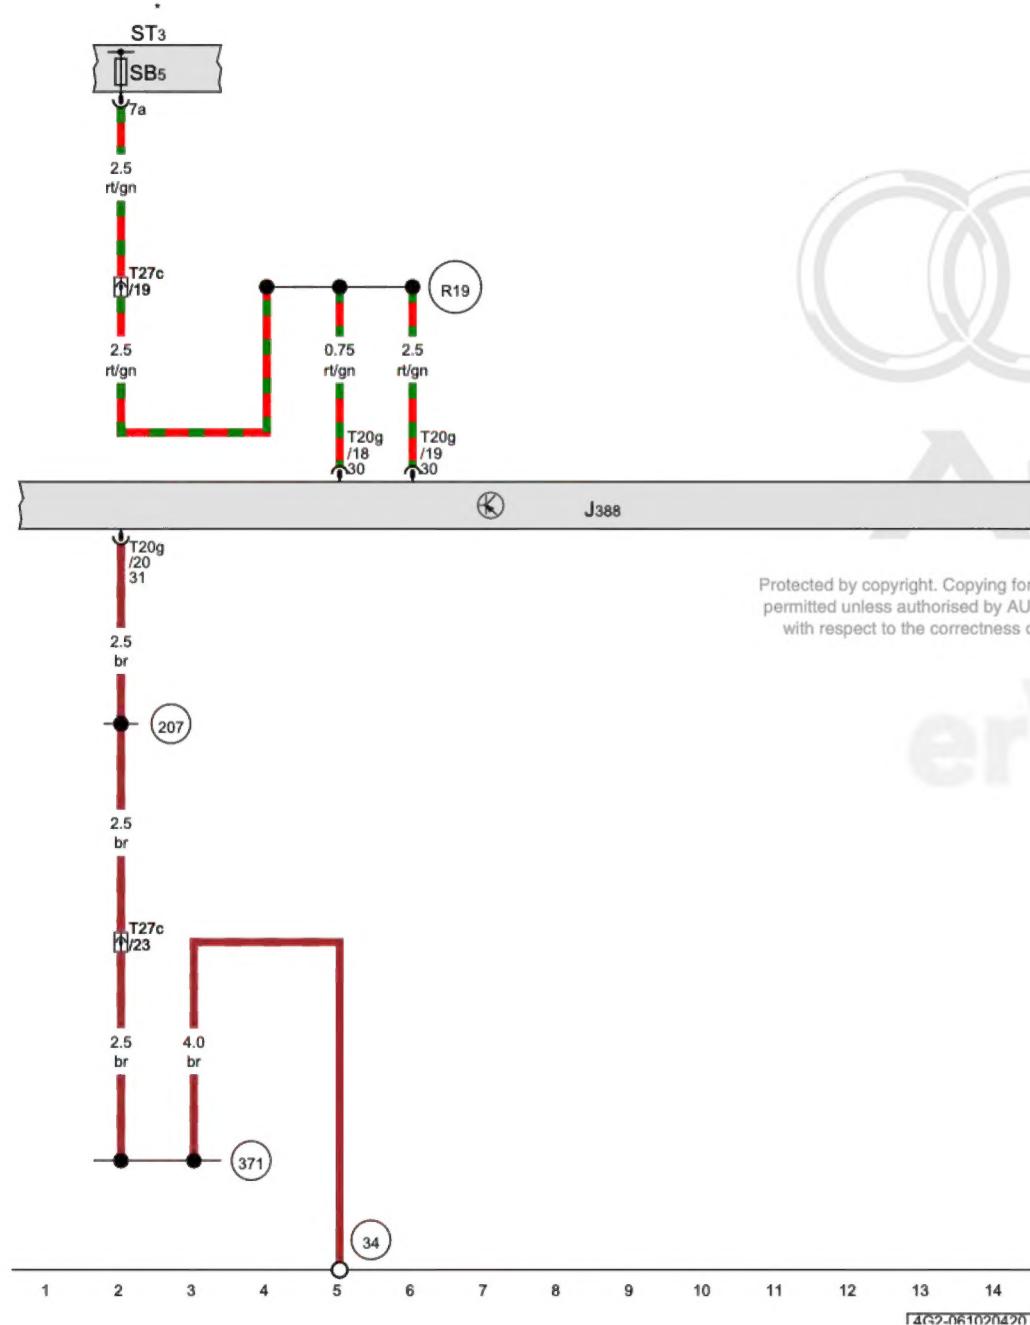

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Left Rear Door Control Module


- E699 Rear Window Shade Button in Left Rear Door
- E700 Left Rear Power Window Button in Left Rear Door
- E701 Right Rear Power Window Button in Left Rear Door
- E702 Sunroof Button in Left Rear Door
- E703 Sunroof Shade Button in Left Rear Door
- J388 Left Rear Door Control Module
- T10ad 10-Pin Connector
- T16n 16-Pin Connector

408 Ground Connection 3 (in Left Rear Door Wiring Harness)

R54 Connection 58S (in Left Rear Door Wiring Harness)

* For Vehicles with a Sunroof

*2 For Vehicles with Panorama Sunroof

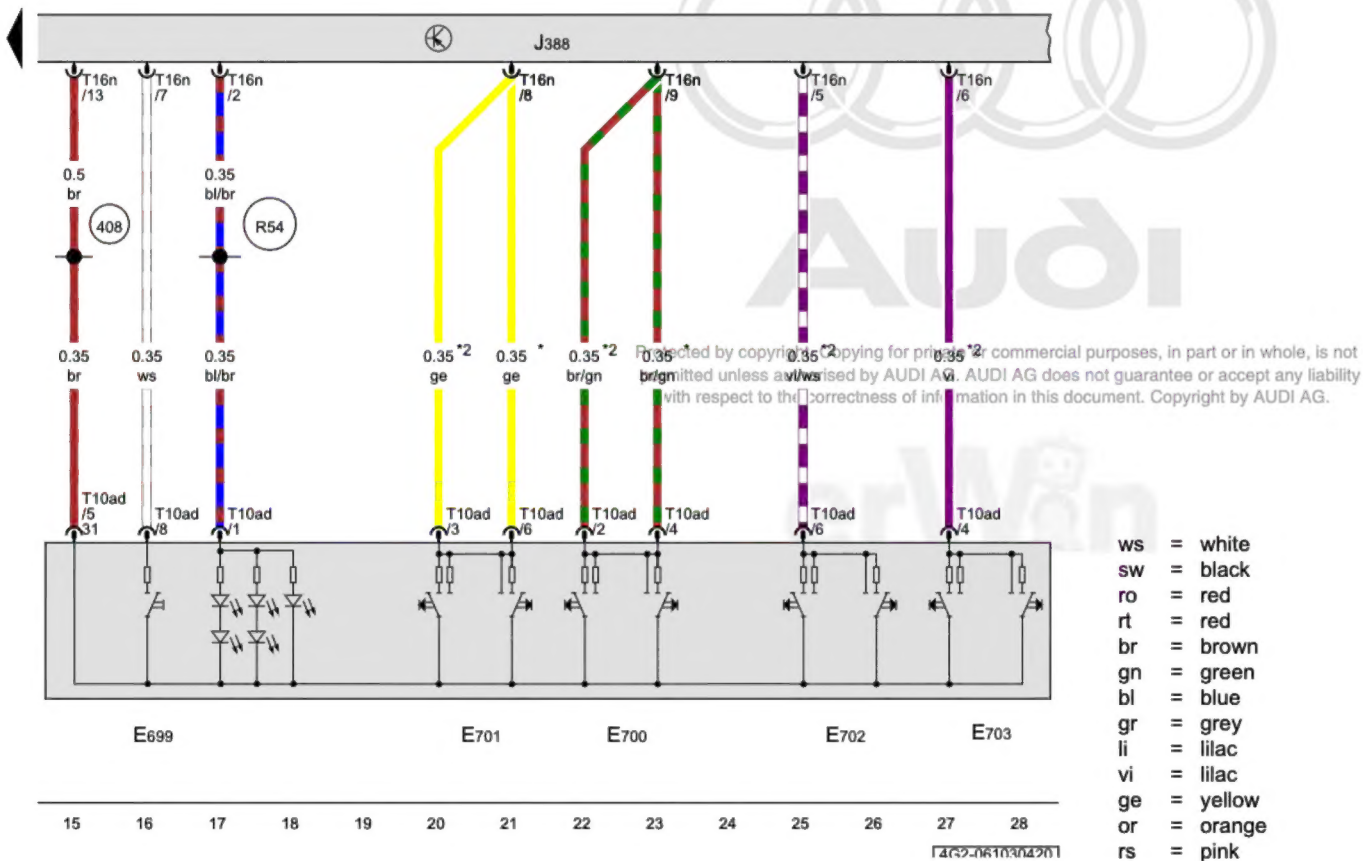

Right Rear Door Control Module

J389 Right Rear Door Control Module

ST2 Fuse Panel 2

SF7 Fuse 7 (On Fuse Panel F)

T20h 20-Pin Connector

T27d 27-Pin Connector, On the Right B-Pillar

35 Ground Connection Under Front Passenger Seat


208 Ground Connection (in Right Rear Door Wiring Harness)

378 Ground Connection 13 (in Main Wiring Harness)

R23 Positive Connection 1 (30) (in Right Rear Door Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions

*2 Running Change

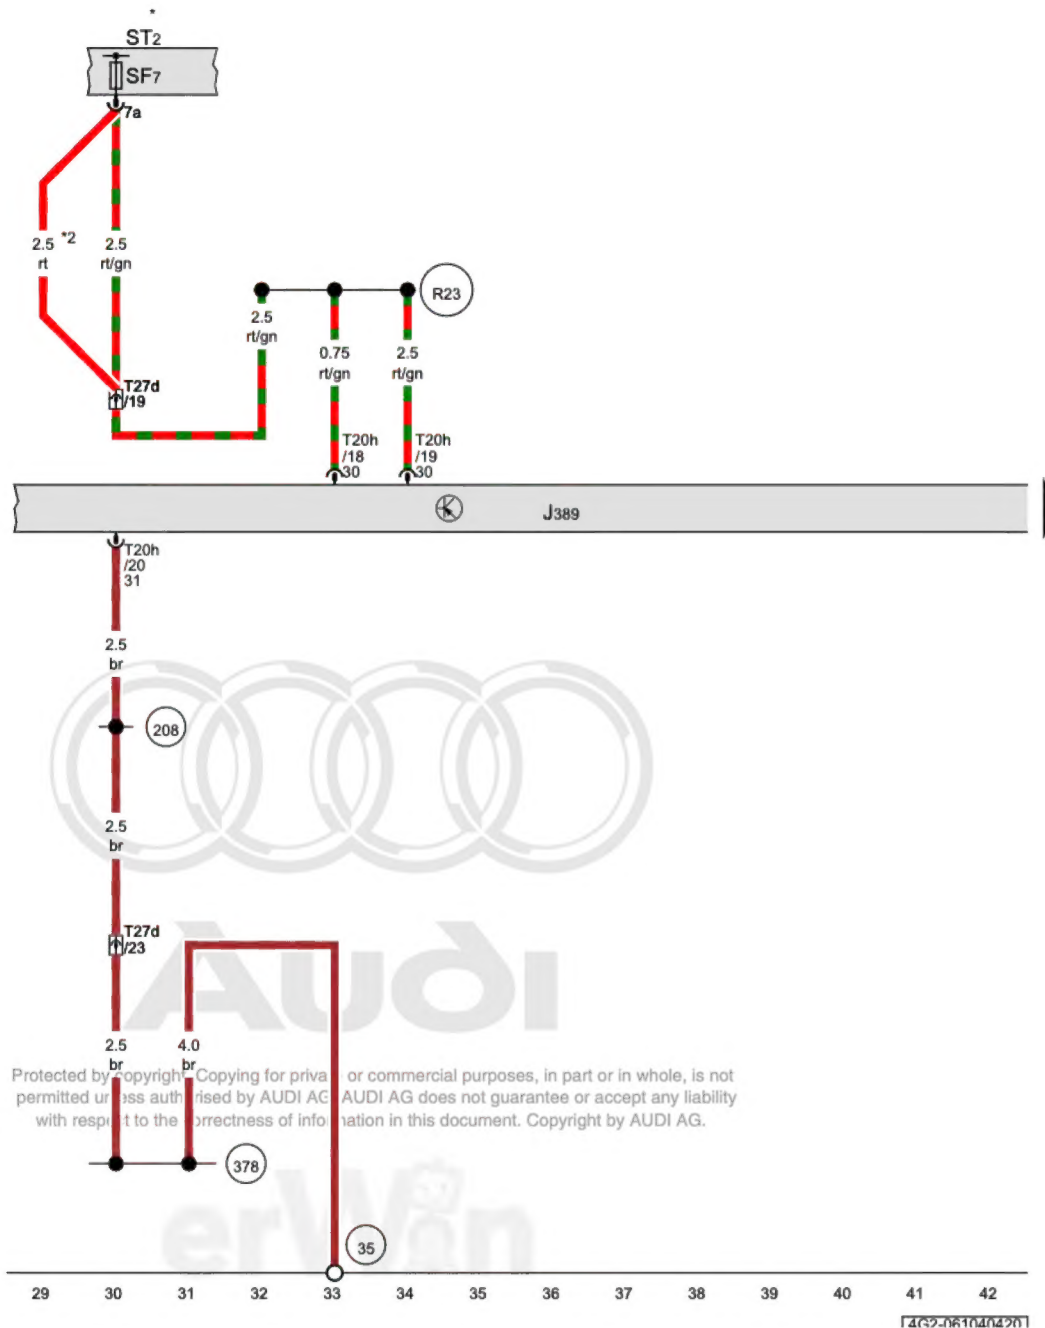

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by Copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the express authorization of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Right Rear Door Control Module

- E704 Rear Window Shade Button in Right Rear Door
- E705 Right Rear Power Window Button in Right Rear Door
- E706 Left Rear Power Window Button in Right Rear Door
- E707 Sunroof Button in Right Rear Door
- E708 Sunroof Shade Button in Right Rear Door
- J389 Right Rear Door Control Module
- T10ae 10-Pin Connector
- T16o 16-Pin Connector

409 Ground Connection 3 (in Right Rear Door Wiring Harness)

R55 Connection 58S (in Right Rear Door Wiring Harness)

- * For Vehicles with Panorama Sunroof
- *2 For Vehicles with a Sunroof

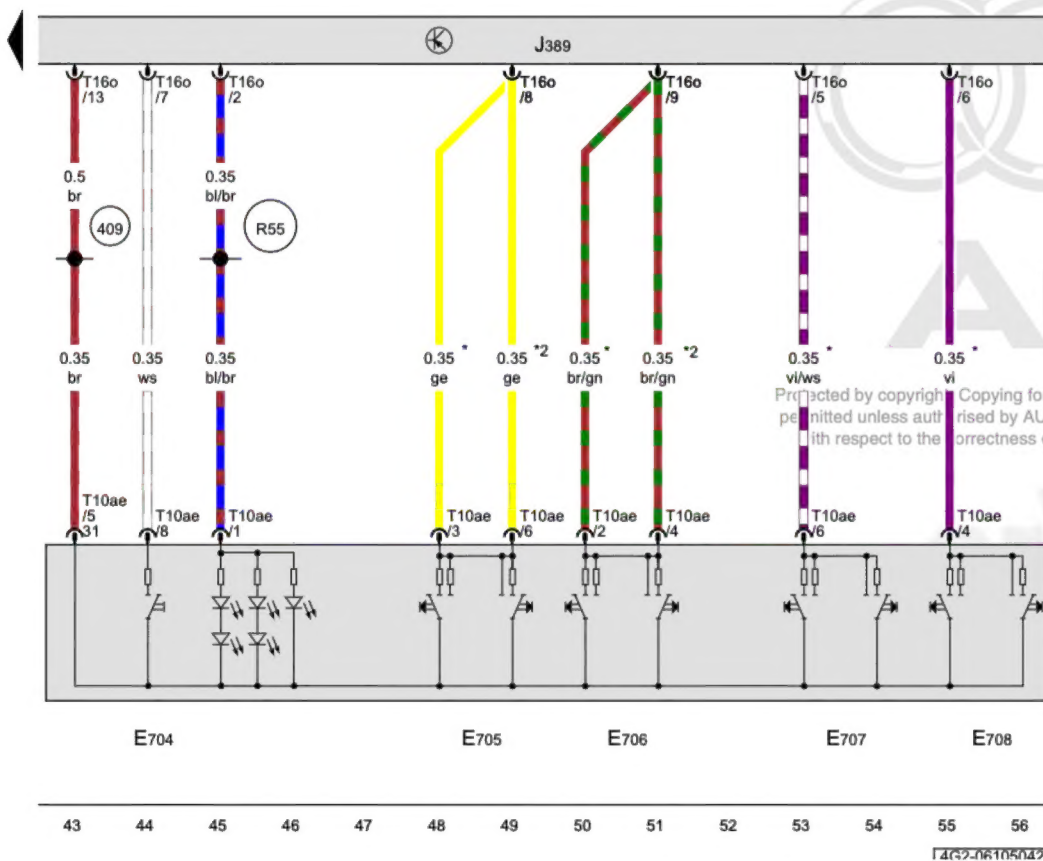

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Comfort System Central Control Module, Vehicle Electrical System Control Module

- E149 Rear Window Shade Switch
- J393 Comfort System Central Control Module
- J519 Vehicle Electrical System Control Module
- L156 Switch Illumination Bulb
- T4eq 4-Pin Connector
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T17r 17-Pin Connector
- T32c 32-Pin Connector
- V91 Rear Window Shade Motor

- 45 Ground Connection Behind Instrument Panel, Center
- 51 Ground Connection in Luggage Compartment, Right
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- A175 Connection 58s (in Instrument Panel Wiring Harness)
- * Omitted as a Running Change
- *2 Running Change

